



Grab an air nozzle and hook it up!

#### NOTICE!!!!! CAUTION!!!!!!

If you are not careful with the following steps you can and most likely damage one or more of the air tubes in your annex!!!





Find the inlet where the air tube connects to the main canvas to fill the annex. Make sure it's open and make sure you have closed the seven (7) valves on the lower portion of the tubes.

#### NOTICE!!! CAUTION!!!

DO NOT over inflate!! You can and will cause damage to the tubes.


Open the fill valve and slowly start to add air. Inflate the tubes to the point of them getting round, but still very easily squeezed. Don't over inflate! Then close the valve..

#### Align the tubes with velcro

Make sure all the tubes are partially inflated and there are no kinks. Then make sure you align the tubes with corresponding velcro.





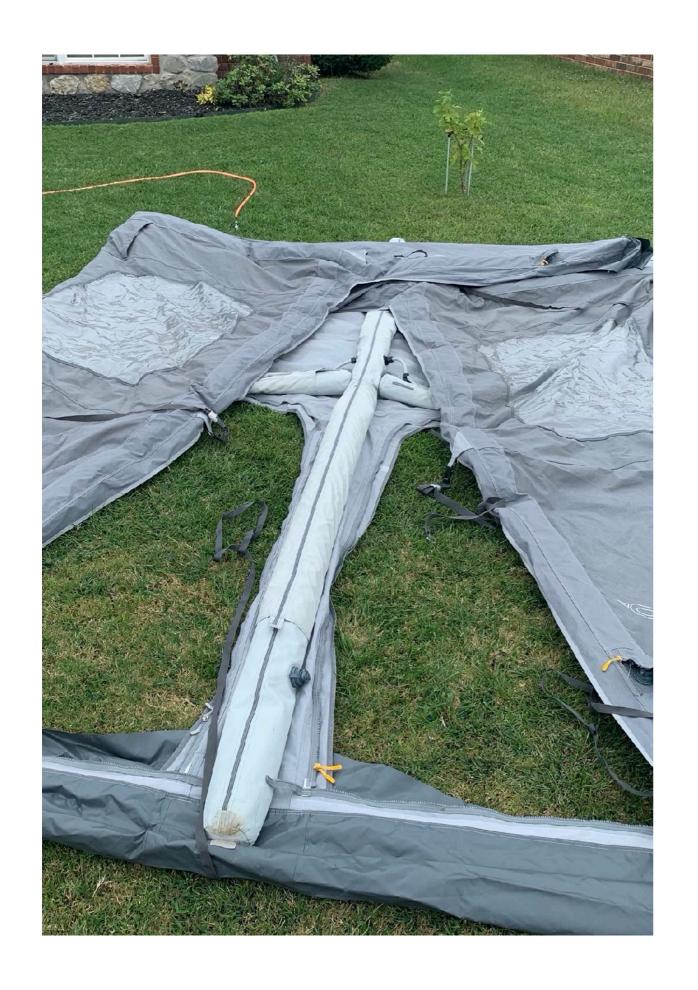

### Let the air out

Open all the valves to allow the air to escape. Let the annex sit for a little bit to ensure the air gets out. Then fold over the outer (wings) sides if you will and let the annex rest. The weight will also help push any remains air out.

#### Fold in half and allow to rest.

Now take one side and drag it over on top of the other half. From there you can let it sit for a min to bleed off more air. At this point get the bag and slide it over the end of the annex. This will help you as you roll it up. As you roll from the bottom up towards the bag be mindful of the overall width. You may need to shift it to one side or the other. Once it's rolled up, just reach under the annex and roll the entire thing with the bag still partially around it. You should end up with it in the bag and ready to zip.





